


Micro Switch

Montaggio micro switch
per cassette estraibili

*Microswitches
installation*


LA FER
Simple ideas for great projects | Ibérica

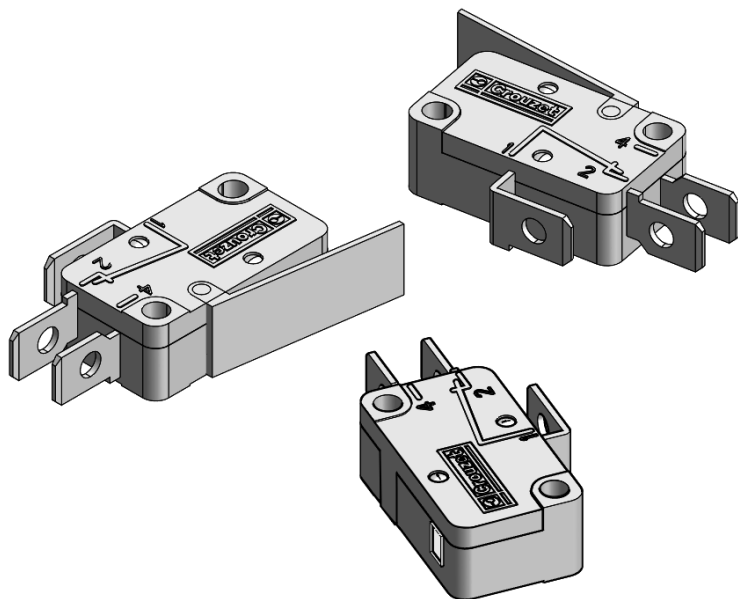


LA FER IBÉRICA CUADROS ELÉCTRICOS, S.L.
Polígono Industrial Mediterráneo
Calle Senyera Nave 1 - 46560 Massalfassar Valencia (España)
T. (+34) 637 894 150 - laferiberica@laferiberica.com

lafer.com


Micro 1 (Test)

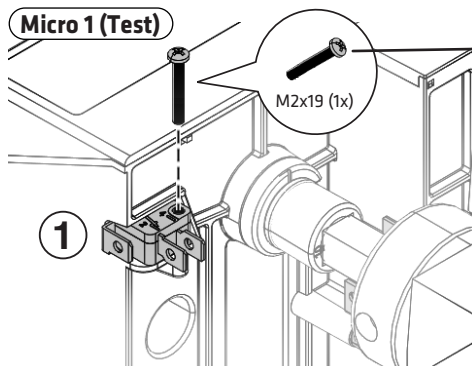

 Utilizzare la vite più lunga
Use the longest screw




Micro 2 (Sezionato/Servizio Disconnect/Connected)


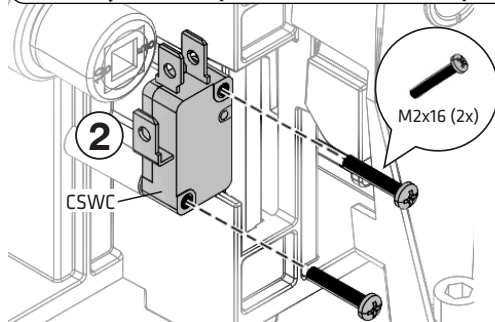


ATTENZIONE: Per fissare il micro 2
è necessario portare il sezionatore
in posizione "SEZIONATO".



ATTENTION: To install the
microswitch, SwitchLAF must be
in "DISCONNECTED" position.

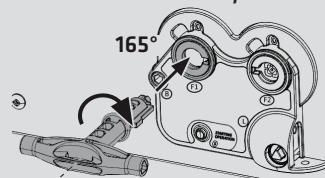

Micro 3 (Inserito/Estratto Inserted/Withdrawn)

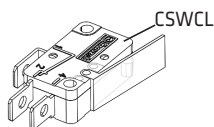
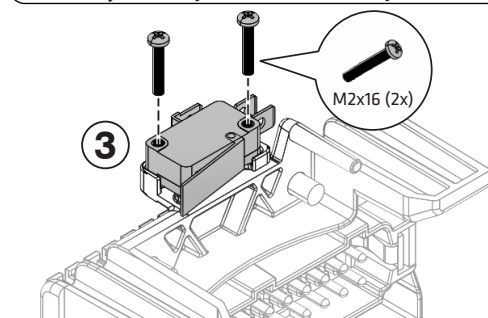


Micro 4-5 (Inserito/Estratto remoto Remote inserted/Withdrawn)

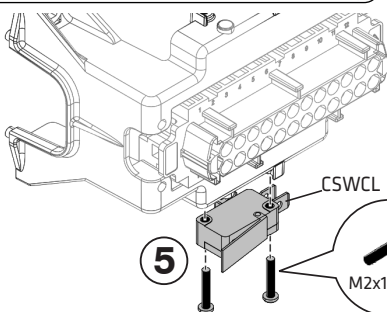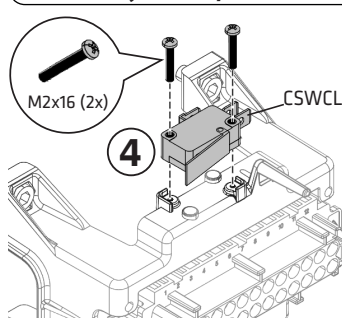


SwitchLAF

Coppia di serraggio Max tightening torque		
3 Nm	M2	

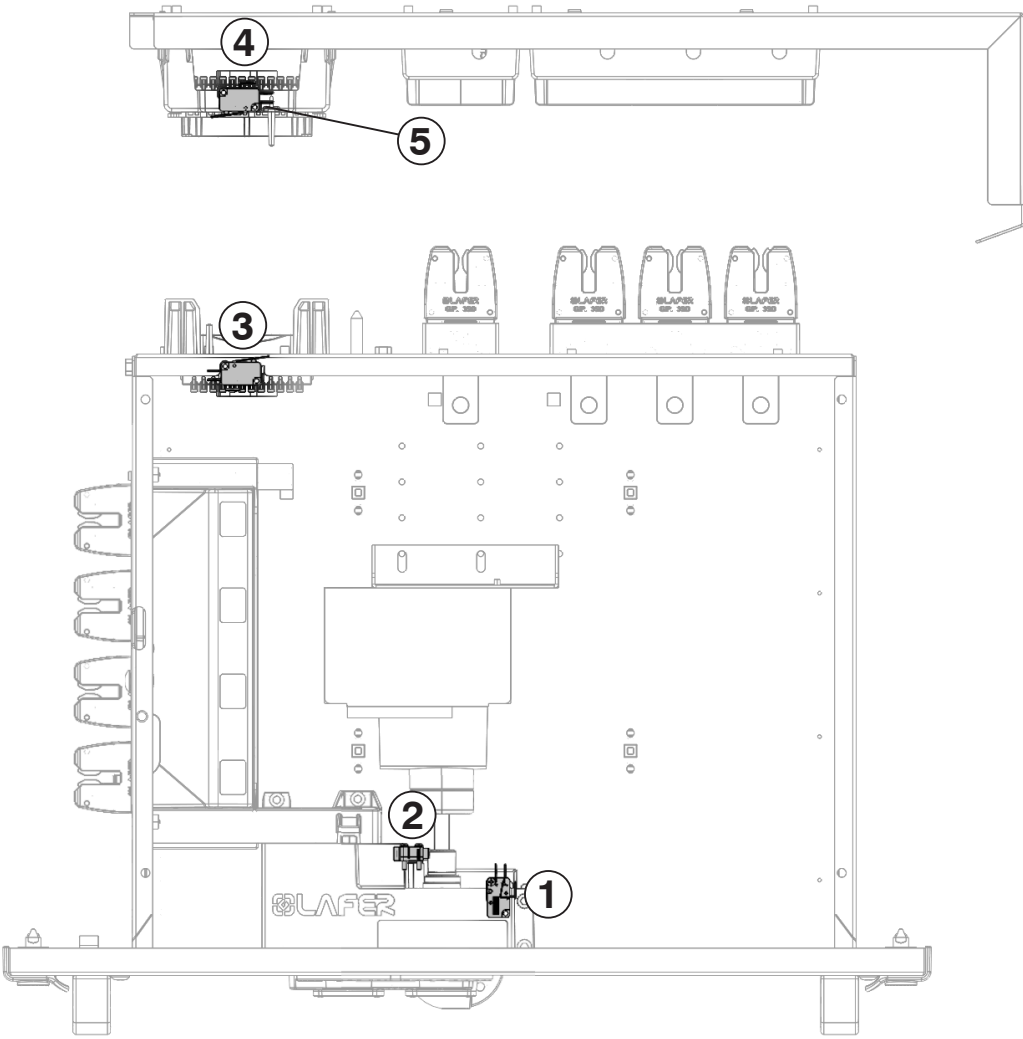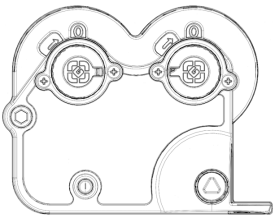


Micro 1 (Test)

Micro 2 (Sezionato/Servizio Disconnected/Connected)

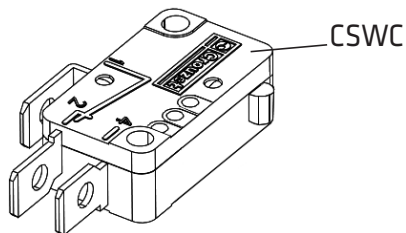



Micro 3 (Inserito/Estratto Inserted/Withdrawn)

Micro 4-5 (Inserito/Estratto remoto Remote inserted/Withdrawn)

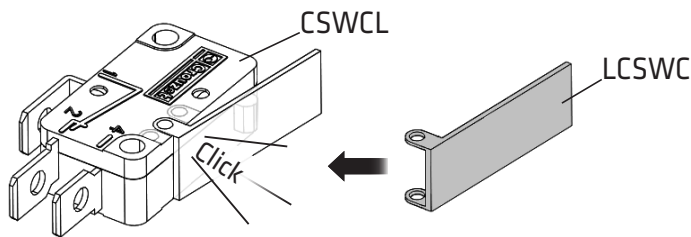

SwitchFEED

Micro 1 (Sezionato/Servizio Disconnected/Connected)

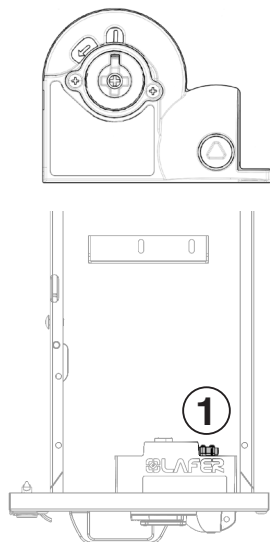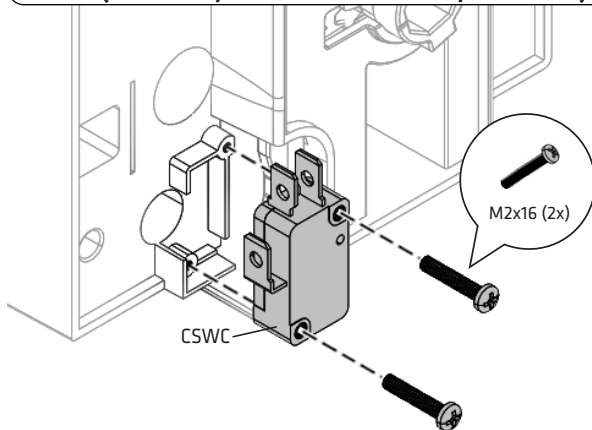

LAST UPDATE: 06/2024